



Installation instruction

ARAT Special mount for Navigation Systems

Artikel-Nr.: NS 1302.1
for Audi A3
from may 2003

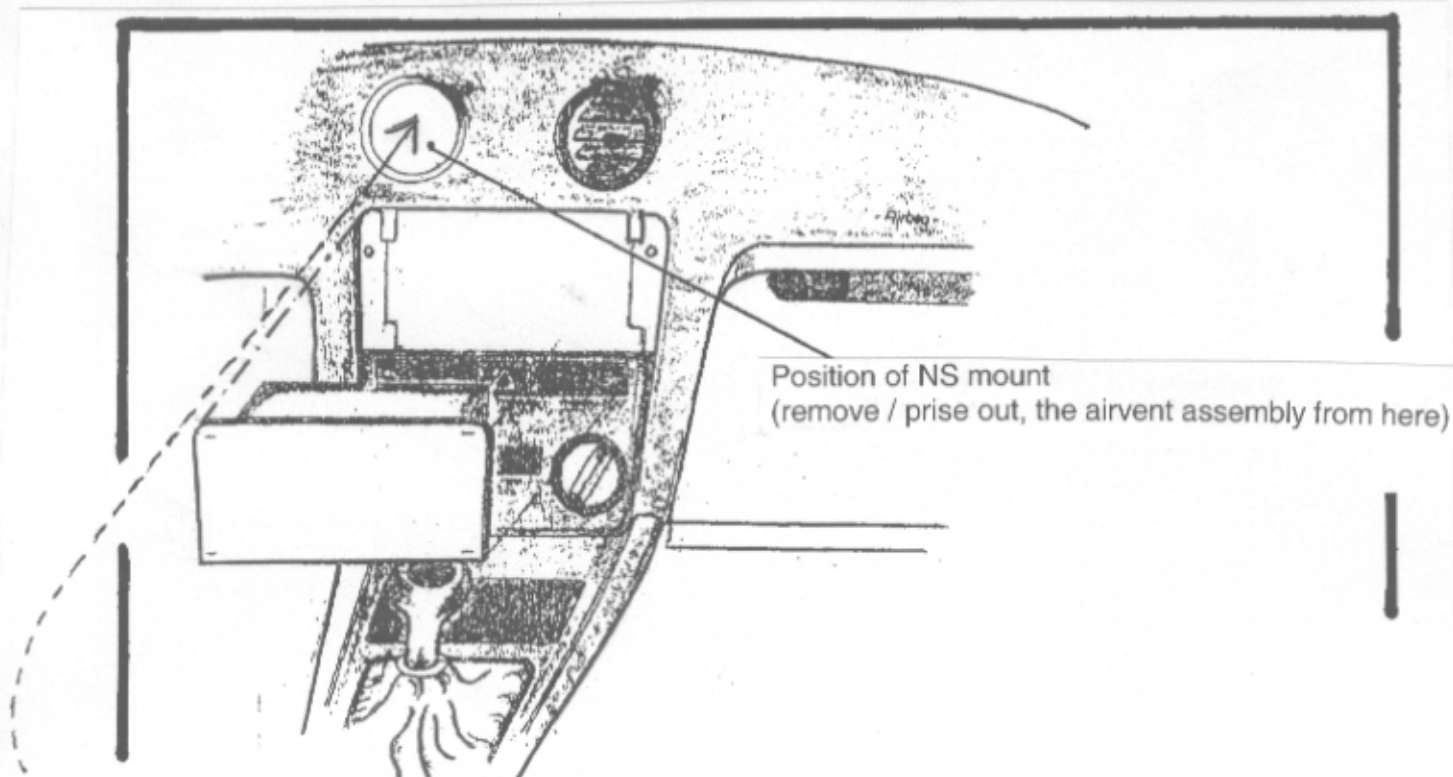

Position of NS mount
(remove / prise out, the airvent assembly from here)

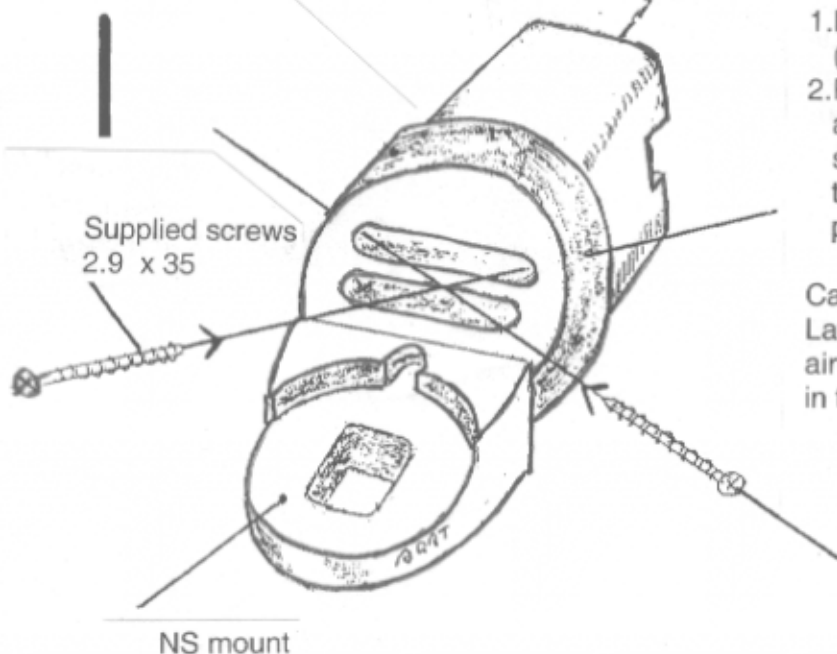

Supplied screws
2.9 x 35

NS mount

Installation instruction

1. Remove the left hand airvent assembly
(It is only a press fit)
2. Place the NS mount into the open
airvent housing and secure with the
supplied screws 2.9 x 35 through
the mount diagonally into the dashboard,
pre-drill holes in the NS mount $\varnothing$ 2mm

Cable channel:

Lay the cable to the display through the
airvent assembly via the pre-formed channel
in the NS mount